

Equipment instruction

MODEL: PPO-2

VERSION: 202312

CONTENTS

Safety precautions ————————————————————————————————————	2
Basic equipment parameters ————————————————————————————————————	2
Structure introduction —	2
Safety Operation Instructions	3
Instructions for paper input ————————————————————————————————————	3
Maintenance instructions —	4
Instructions for cutter abnormal ————————————————————————————————————	4
Introduction to the touch screen —	
Accessories description ————————————————————————————————————	6
Installation instructions ————————————————————————————————————	6
Instructions for paper use	

SAFETY PRECAUTIONS

Please use 220V power supply

Keep away from direct sunlight and outdoor places

When the machine in fault, please cut off the power quickly


Disconnect the power supply and remove the plug before cleaning or maintaining the machine

Do not disassemble or repair the machine without technical guidance.


BASIC MACHINE PARAMETERS

Voltage	Power	Speed	Weight	Size
220V	120W	12M/Min	54KG	750*440*1180MM


INTRODUCTION OF THE STRUCTURE

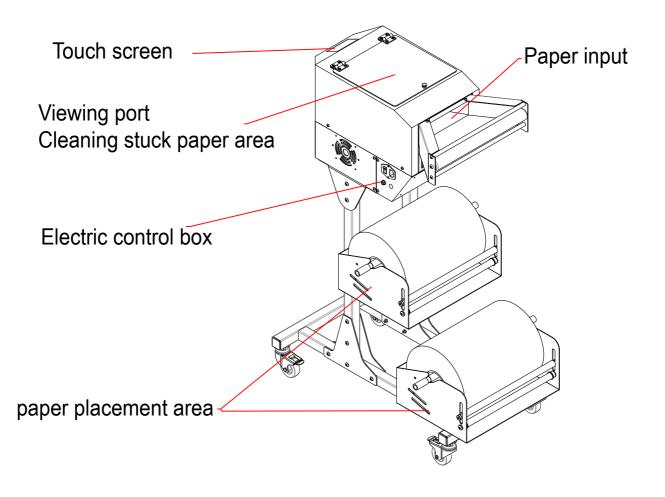

Introduction of the structure

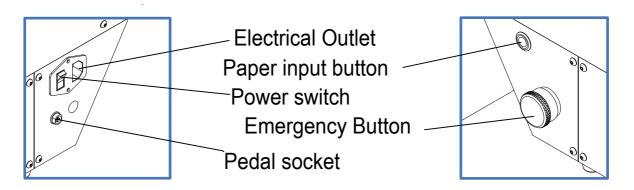

Instructions for safe operation

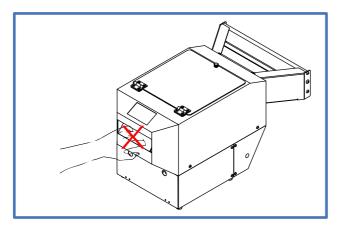


Do not put your hand into the paper outlet

PAPER INPUT INSTRUCTIONS

Fold the paper in half as shown


Put the paper as s-shaped through rod, press the button let paper input

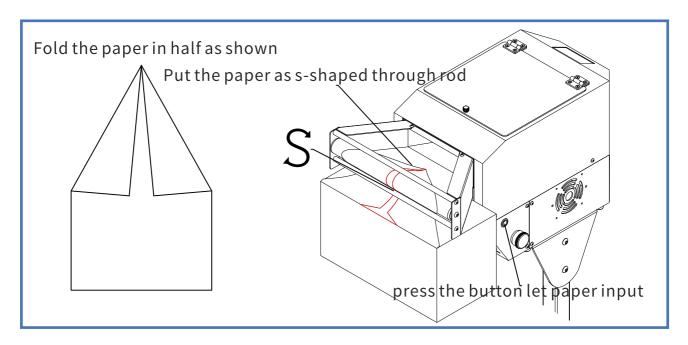

MAINTENANCE INSTRUCTIONS:

ACCORDING TO THE ACTUAL USE TIME, REGULAR MAINTENANCE

Remove the cover, use tools to clean the remaining paper scraps add lubricating oil according to the picture

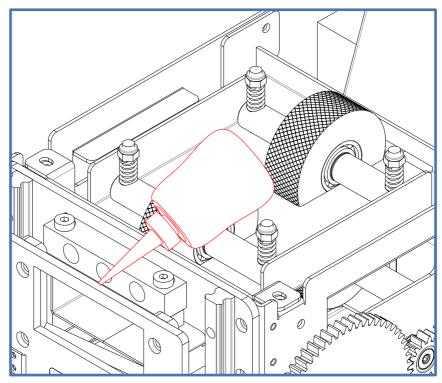

CUTTER ABNORMAL INSTRUCTION

(NOTICE)

Cutter abnormal!

Please check!



If the following message is displayed, the cutter sensor is abnormal and the device stops running

- 1 Check whether the paper is stuck, if it is, clean thepaper first
- 2 After paper clean, running the machine without paper
- 3 If there is no more abnormal introduction, the device is ok
- 4 If there is still abnormal introduction, please contact the engineer from Supplier

Warning: Please power off before cleaning the paper.

INTRODUCTION TO TOUCH SCREEN INTERFACE

LENGTH PARAMETER SPECIFICATION

L-Length of sheet

L-nuit: cm

L- Setting range: 15-999

QTY PARAMETER SPECIFICATION

0- no paper

1-99 quantity of paper

n-unlimited out of paper

OPERATION SEQUENCE

L1-light**→** Length **→** Qty

THE PAPER ORDER

 $L1*Qty \rightarrow L2*Qty \rightarrow L3*Qty \rightarrow L4*Qty$

MODE DECLARATION

Single-Single paper mode

Remove the paper from the opening to continue the next

Auto-Automatic mode


According to the set quantity, continuous paper

MANUAL PAPER


Press and hold, paper continuously out, release the button, automatically cut off

NOTE 1.Light touch no response, hold 2 seconds will be out of the paper


2. Minimum paper length 15CM

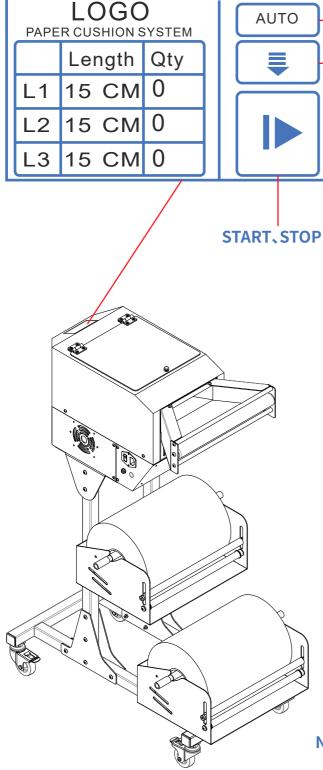

ACCESSORIES DESCRIPTION

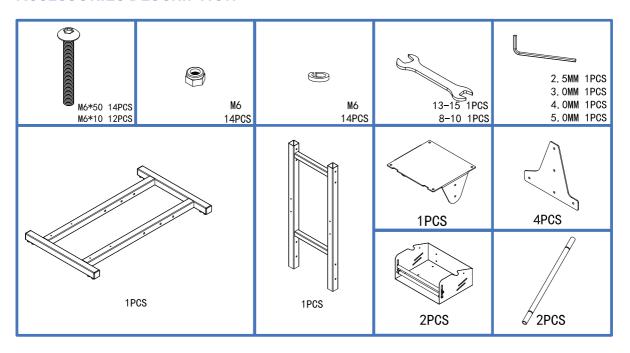

INSTALLATION INSTRUCTIONS

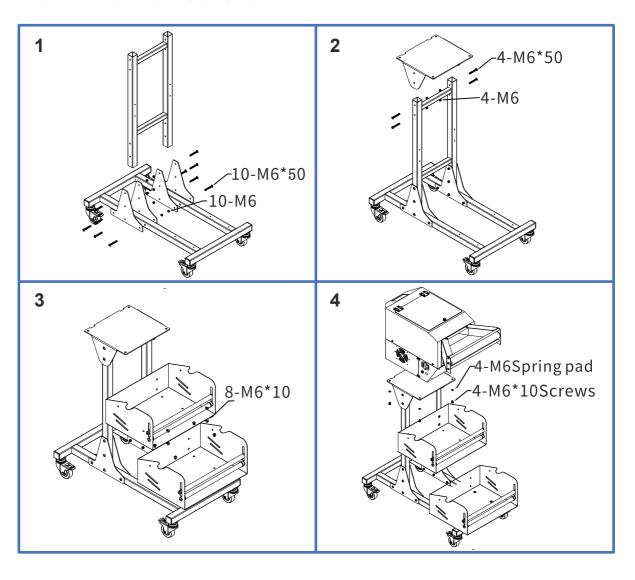

INSTRUCTIONS FOR PAPER USE

Recommendations for paper:

1 single layer, 100% recycled paper-50g (no requirement for load bearing, the most cost-effective)

2 single ply, pure wood pulp paper - 50g

3 single ply, pure wood pulp paper - 70g

4 double layers, pure wood pulp paper-50g/50g

5 double layers, pure wood pulp paper-70g/100% recycled paper-50g (not recommended in principle)

Note: 1:The maximum paper width cannot exceed 395mm, and the maximum paper roll diameter is 24cm

2: Double layer 70g paper cannot be used, Will result in failure to run

