

Cardboard Shredder

Manual CS500 Stand



A: Protective Cover

B: Emergency stop

C: Forward and backward switches

D: Cooling fan

E: Universal wheels

F: Feed inlet

1. Note

Please read carefully before use:

1.1 Carefully remove the machine from the packaging box


1.2 Place the cardboard shredder on a clean and flat ground.



2. Operating Instructions

2.1 Connect the power supply and tightly connect the power cord to the socket at the rear of the machine

2.2 Check the function of each button before operating the machine (as shown in the figure below)

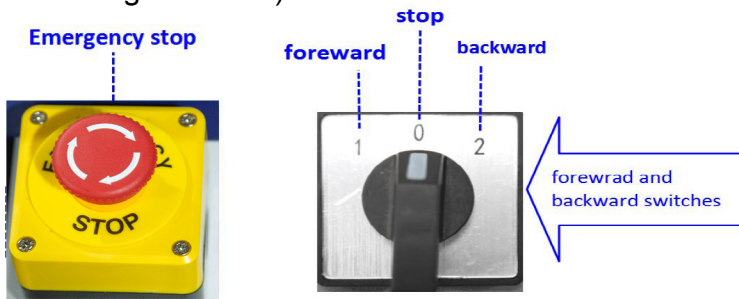

2.3 Usage

2.3.1 Turn on the power switch and adjust the forward and reverse switches to the "1" position (forward rotation position)



2.3.2 Iron nails and metal objects entering the machine will damage the machine. Before inserting corrugated paper, it is necessary to check whether there are any metal nails or metal foreign objects on the corrugated paper. After confirming that there are no metal foreign objects, parallel insertion of the corrugated paper into the feeding port will begin. The machine will start making mesh cushioning materials (please note that the interval between forward rotation, reverse rotation, and stop buttons should be at least 1-2 seconds)



- 2.3.3** After the paper pad is made, turn the switch to the "0" position (stop position) and the machine will immediately stop
- 2.3.4** If the paper gets stuck or needs to be exited before it is finished, then "2" (reverse switch) needs to be used, and manual assistance is required to pull out during reverse
- 2.3.5** If you need to shut down, please make sure to first set the forward and reverse switches to the "0" position (stop position), and then turn off the machine power switch.

3. Electrical Safety

- 3.1** Ensure that the machine is connected to the matching voltage.
- 3.2** The use of power extension cables must match the rated power of the machine.
- 3.3** Ensure safe grounding of AC power supply.
- 3.4** Damaged power cord, machine operation prohibited.
- 3.5** The machine must be repaired by professional personnel.

4. Machine Maintenance

- 4.1** During maintenance, cleaning, and upkeep, please unplug the power cord from the machine
- 4.2** Ensure that there is no paper or other dirt at the feeding port

4.3 Regularly clean the dust at the heat dissipation port of the front cover of the machine to ensure smooth air intake

4.4 Check if there are any residual paper scraps at the feeding port, and if there are, clean them thoroughly

5. Basic Parameters

Speed	Around 12m/min
Paper Thickness	Less than 10 MM
Cutting Width	500 MM
Voltage	220V 50HZ
Power	1500 W
Machine Size	700*450*1000 MM
Machine Weight	168 KGS
Packaging Size	800*570*1200 MM
Packaging G.W.:	206 KGS