

Kraft Paper Cushion machine instructions

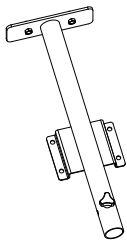
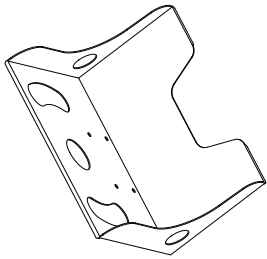
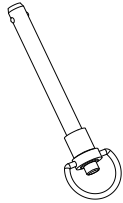
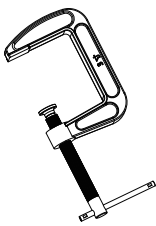
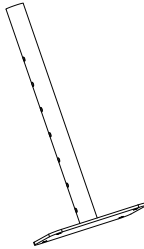
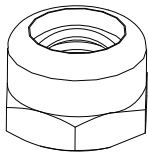
 
 
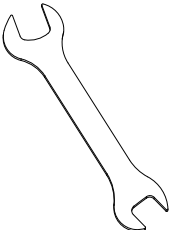

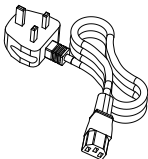
MODEL : NP-P2

VERSION : 202406

CONTENTS

Accessories Description	1
Basic equipment parameters	2
Introduction to Structure	2
Installation instructions	3
Operating instructions	4
Maintenance instructions	6

Accessories Description

 <p>X1</p>	 <p>X1</p>	 <p>X1</p>
 <p>X2</p>	 <p>X1</p>	 <p>M8 X6</p>
 <p>M8*16 X4</p>	 <p>X1 5MM</p>	 <p>X1 13-15</p>
 <p>The actual product shall prevail X1</p>	 <p>The actual product shall prevail X1</p>	

Safety instructions

Please use the agreed voltage when ordering

AvoiAvoid placing in direct sunlight and outdoor areas.

When a fault occurs, please cut off the power immediately.


When cleaning or maintaining the equipment, disconnect the power supply and remove the plug.

Do not disassemble or repair the equipment without the guidance of technical personnel.


Basic equipment parameters

Voltage	Power	Speed	Weight	Size
220V	120W	70 meter/min	29KG	94*94*164CM

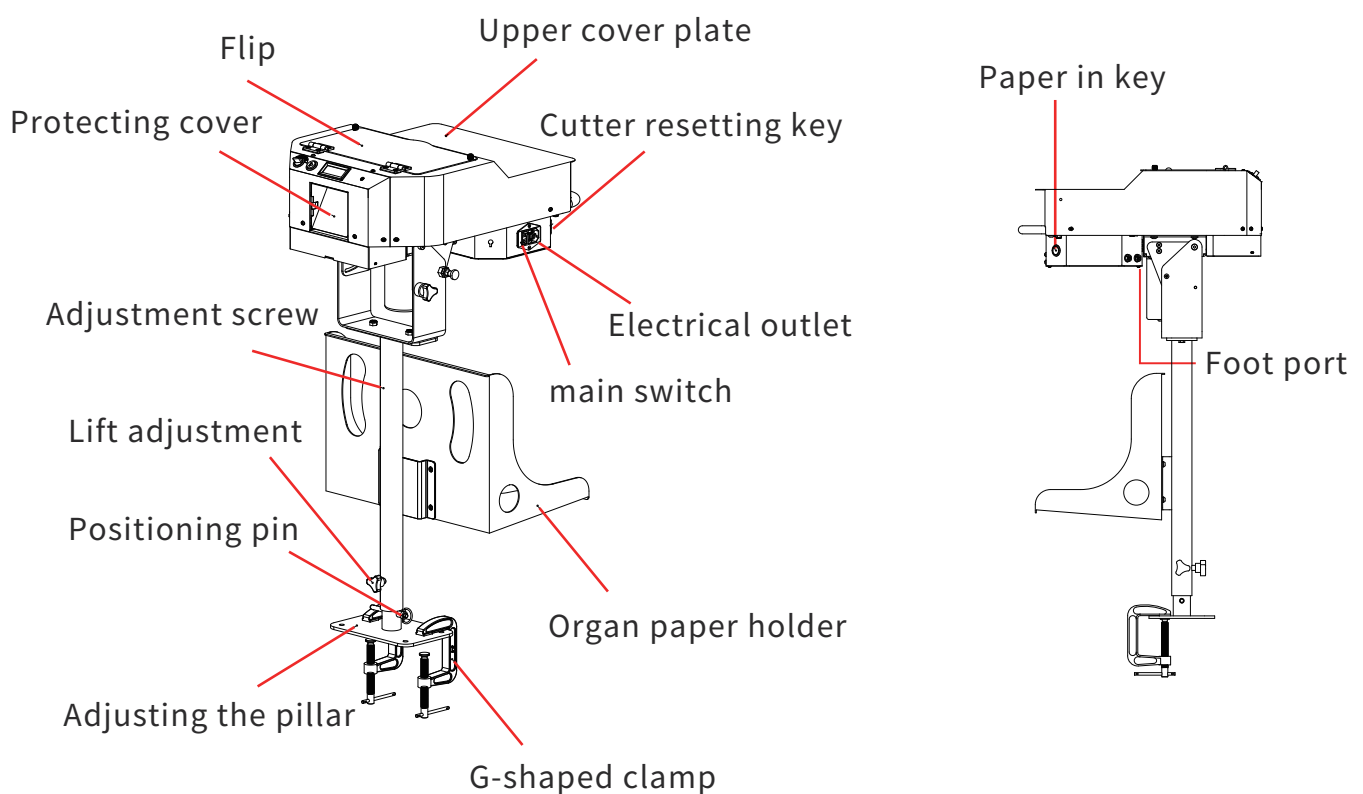STRUCTURE INTRODUCTION




Installation instructions

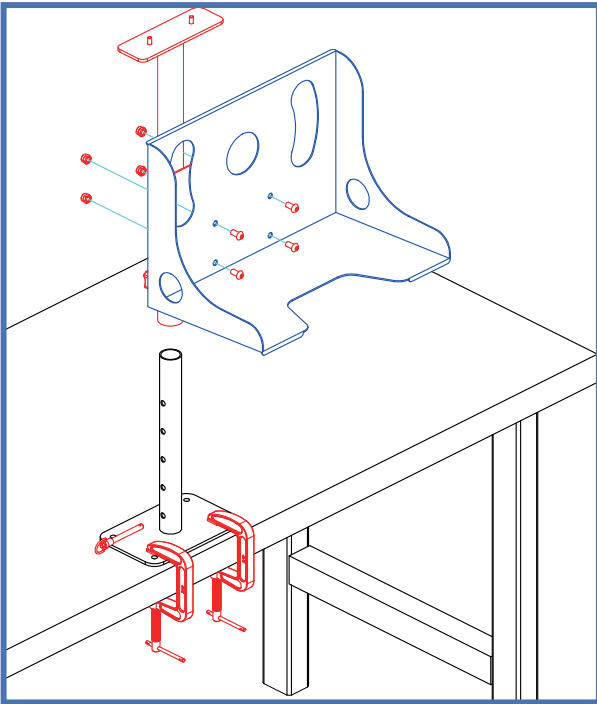

Installation of Clamping Plate Organ Paper Plate

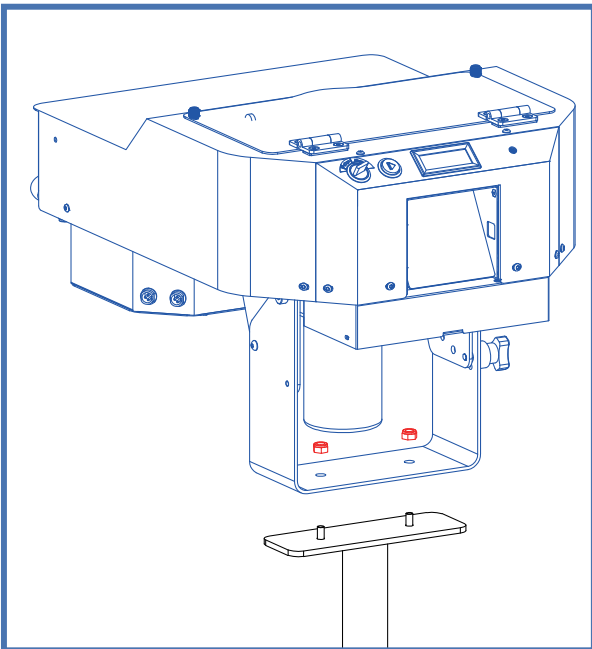1. Place the adjustment stand near the edge of the table top, place the two G-clips on both sides, tighten the handle, and fix the adjustment stand.
2. Insert the up stand into the adjustment stand, and insert the latch into the hole of the adjustment stand.
3. Insert four M6*14 screws into the spring washer, and lock the paper holder.




Host installation

1. Align the hole in the base of the main engine with the head of the screws on the upper post, and lock it tightly using two M8 lock-nuts;
2. The installation method of chuck plate and support plate is the same as above.

Operating instructions

Mode switching operation

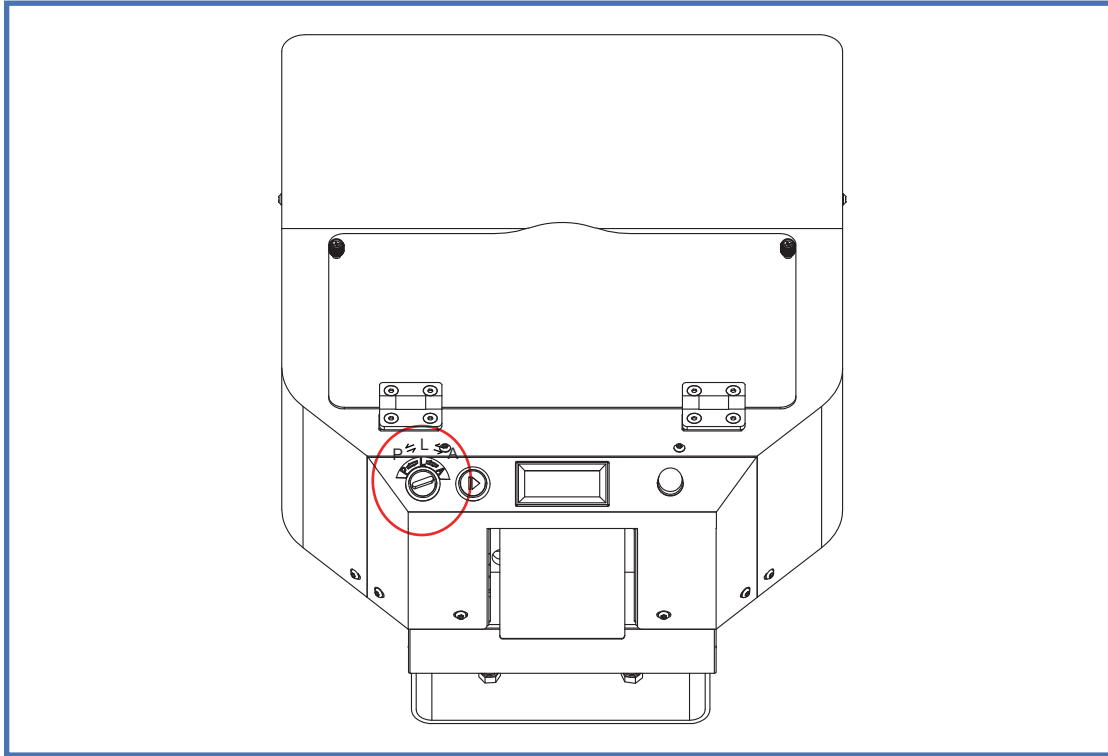Turn the metal knob switch to switch gears, A for automatic mode, L for single mode, P for pedal mode.



Single output mode "L025"

L0025 Indicates that the length is 25CM and the minimum length is 25CM.

Tap the "Start/Stop" switch to automatically output 25CM of paper.

When you take one piece of paper, the next piece of paper comes out automatically, and the cycle continues.

Click the "Start/Stop" switch again to stop the paper.

Modify the length operation: After stopping the output paper, turn the knob switch to adjust the value.

Click the "Start/Stop" switch again and the device runs out of paper.

Continuous paper delivery mode "A025"

A025 indicates that the length is set to 25CM, and the minimum length is 25CM

Tap the "Start/Stop" switch once to automatically output 25CM continuously.

The default amount of paper is unlimited.

Click the "Start/Stop" switch again to stop the paper output.

Modify the length operation: After stopping the output paper, turn the knob switch to adjust the value.

Quantity setting: After stopping, click the knob once, and the screen changes to C000. Rotate the knob to change the value. If no operation is performed in 3 seconds The A025 page is displayed. (The default value is C000, indicating continuous operation. For other values, the device will automatically stop after running this number of times).

Click the "Start/Stop" switch again and the device will output the paper.

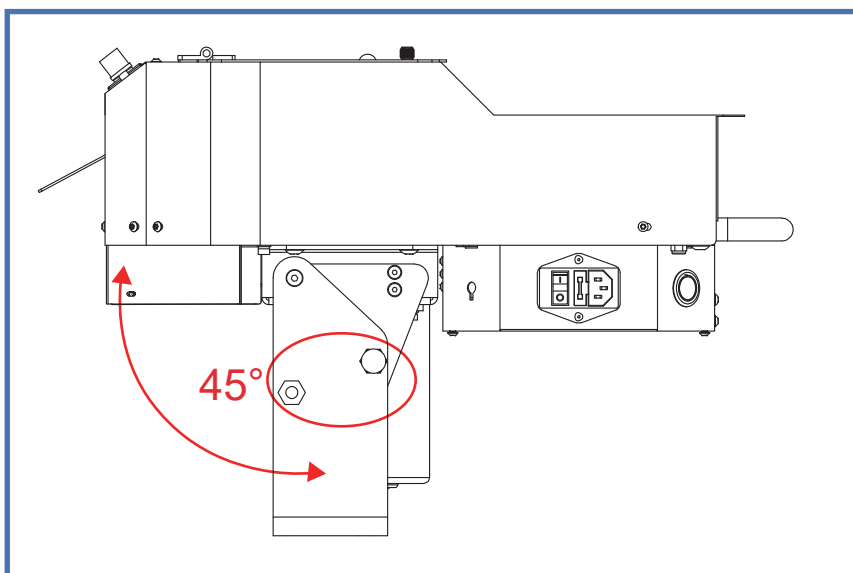
Pedal mode" P---"

Press and hold the pedal - continuous paper output.

Release the pedal - automatic paper cutting.

The machine head can be rotated down by 45°

Pull the knob outward and adjust the Angle of the machine head.




Maintenance instructions

Paper Stuck phenomenon

When paper jam occurs, the device will automatically stop. If it is still running, disconnect the power and restart it.

Observe the stop position of the cutter from the exit edge. If it is not in the reset state (Reset state: the rubber wheel is visible from the outlet and the cutter is on the right), click (short press) the indent button to return the knife to the reset state.

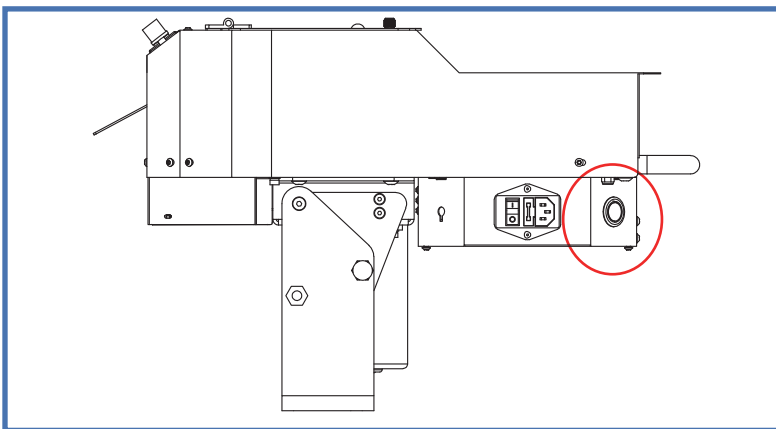Rear knife button, used only when paper is stuck.



Cut off the power supply and clean the remaining paper inside. If you cannot clean the paper from the outlet, open the flap to clean it. Loosen the two screws and lift the lid.

