

# **Kraft Paper Cushion machine instructions**

**MODEL: NP-P2**

**VERSION: 202204**

# CONTENTS

SAFETY INSTRUCTIONS	2
MACHINE PARAMETERS	2
STRUCTURE INTRODUCTION	2
INSTALLATION INSTRUCTIONS	4
OPERATION INSTRUCTIONS	5
MAINTENANCE	7

## SAFETY INSTRUCTIONS

Please use the voltage agreed upon when placing the order, do not mix 110 and 220V.

Pls keep the machine away from sun or outdoor.

Please cut off the power when the machine is broken.


Pls cut off the power and remove from socket when you clean or repair the machine.

Please do not disassemble or repair the machine without technical instructions.



## MACHINE PARAMETERS

Voltage	Power	Speed	Weight	Size
220V	120W	70meter/min	29KG	94*94*164CM

## STRUCTURE INTRODUCTION

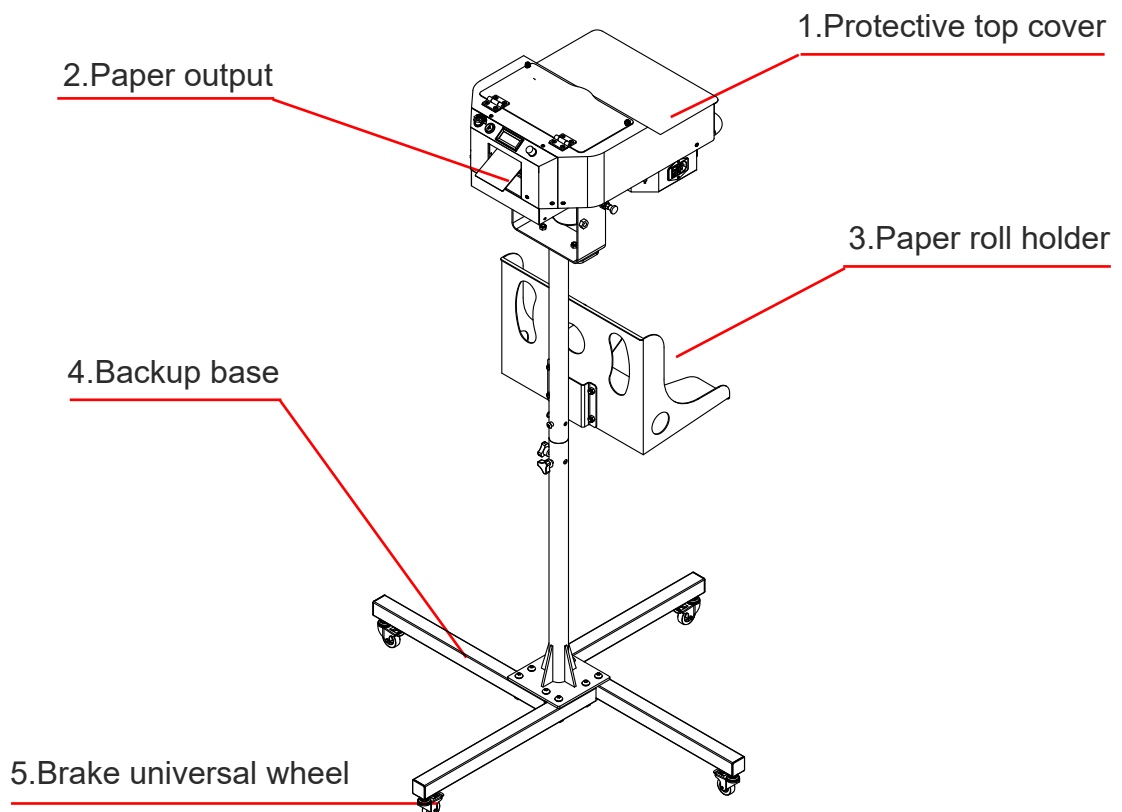

## STRUCTURE INTRODUCTION

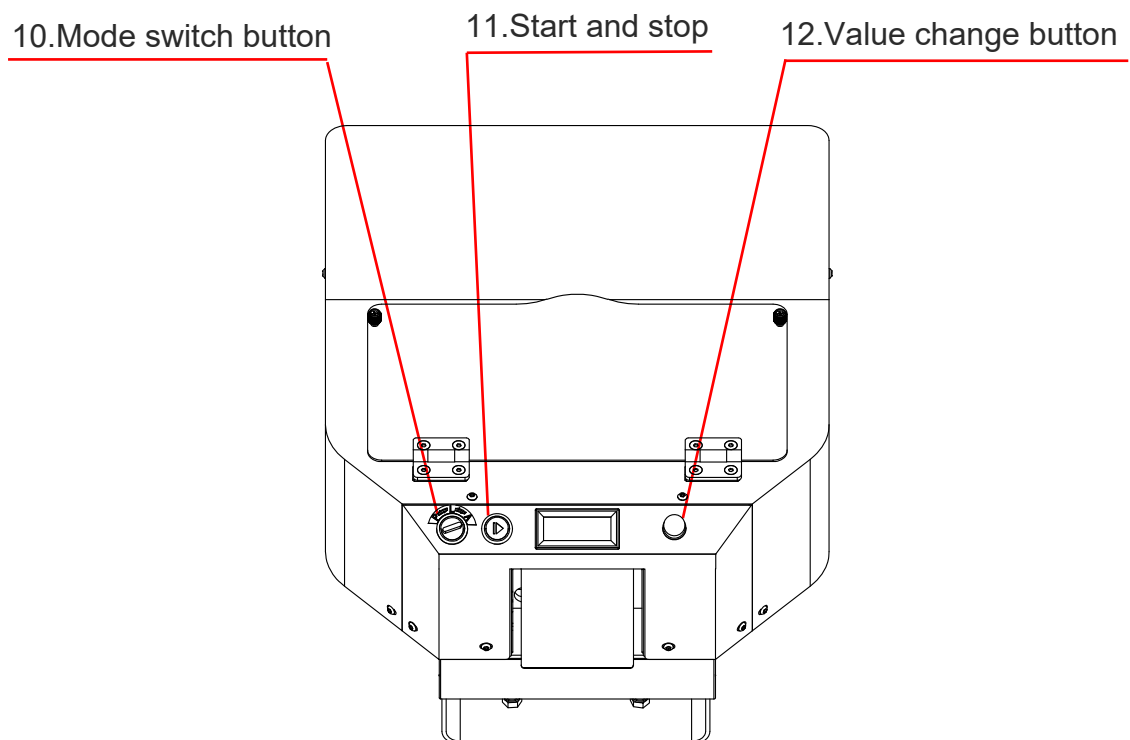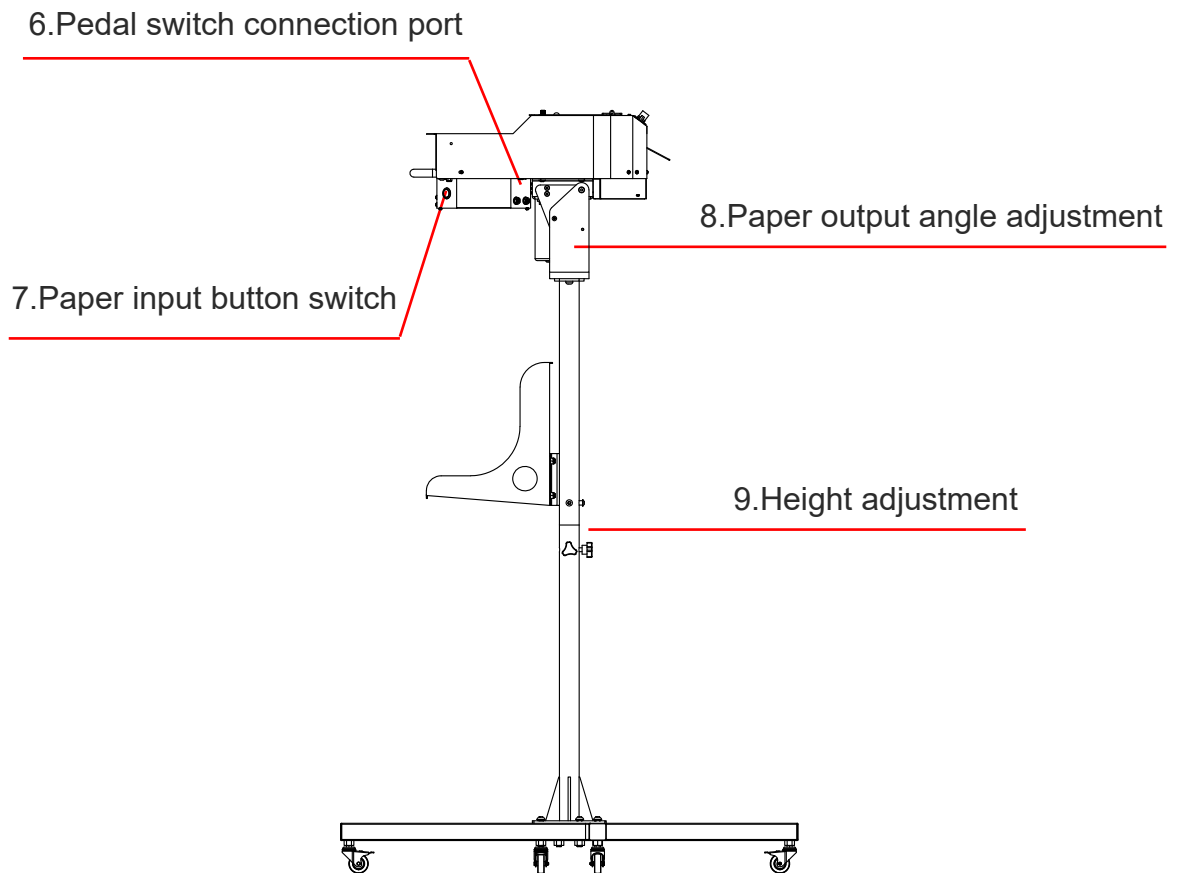

## INSTALLATION INSTRUCTIONS

1 Install the backup base wheels.

Use 8pcs (m10\*45 and gasket) screws to fix into accordingly.





2 Install the backup stand bar.

3 Install paper board.

Use 4pcs (m8\*10) screws to fix into accordingly.

4 Install the main machine.


Use 2pcs (m8) nuts to fix into accordingly.

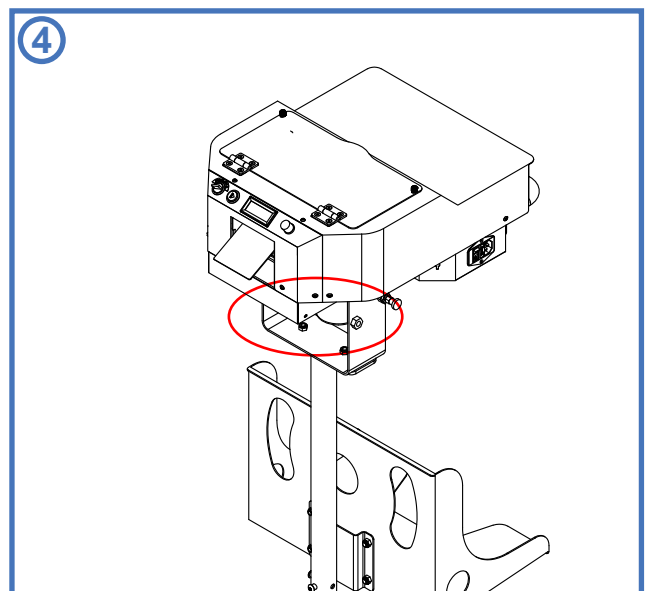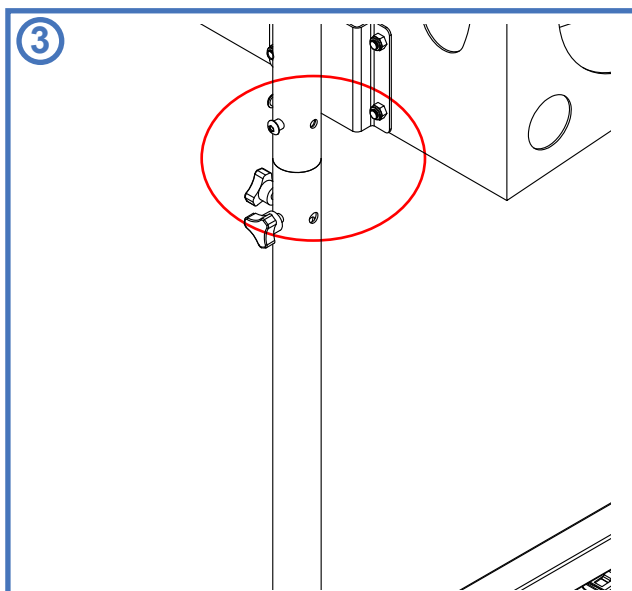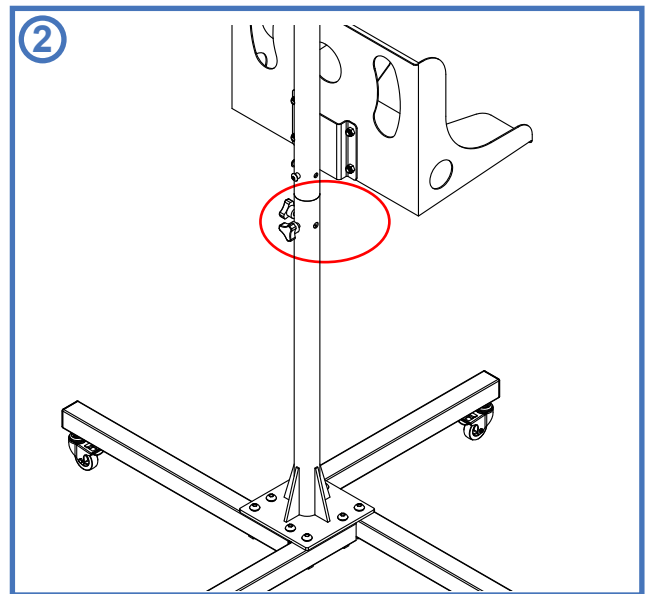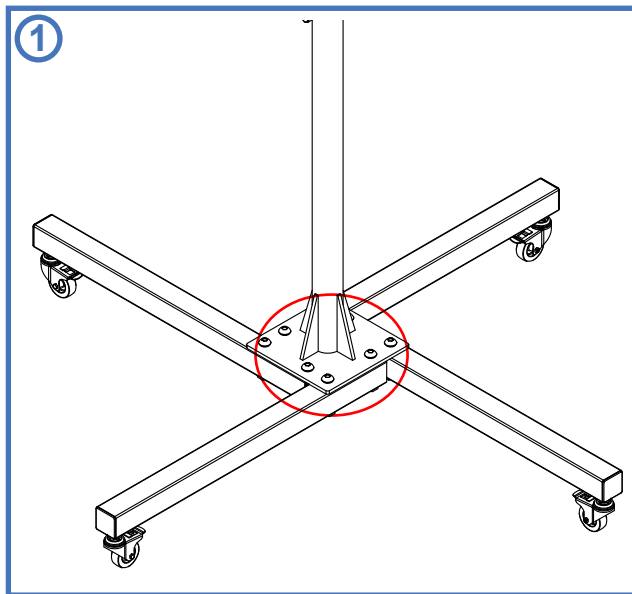

## OPERATION INSTRUCTIONS

### MODE SWITCHING OPERATION

Rotate the metal knob switch to switch gears, A represents auto mode, L represents single mode, and P represents pedal mode.

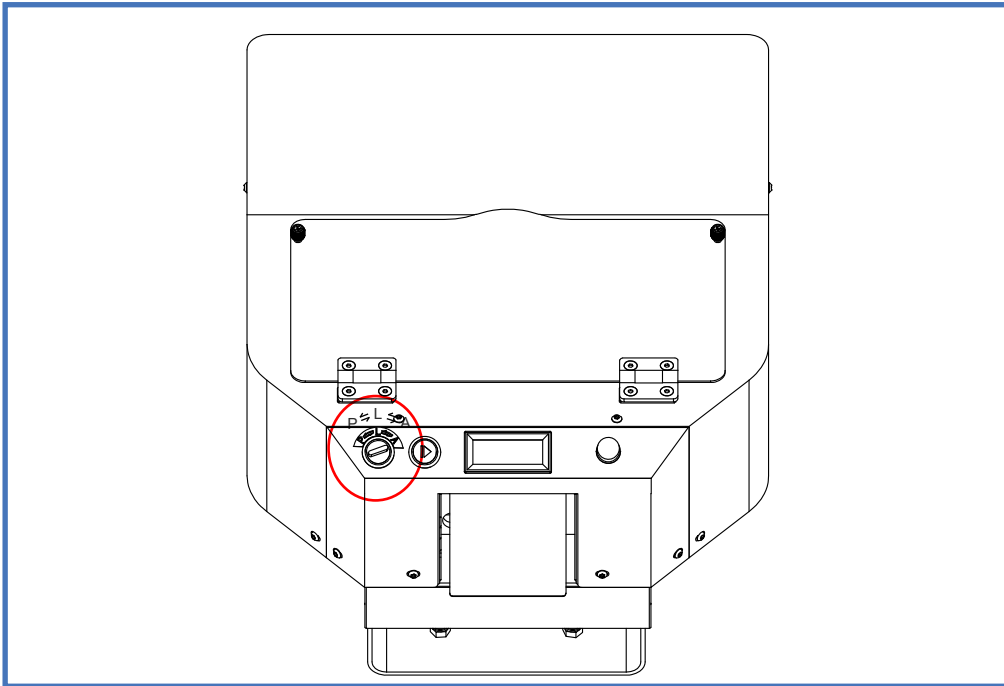

### SINGLE MODE “L025”

L025 means to set the length 25CM and the minimum is 25CM.

Tap the ‘star/stop’ switch once to automatically output a 25CM piece of paper.

Take the previous one to continue to the next one.

Tap the ‘star/stop’ switch once more to stop the paper.

Modify the length operation: After stopping the paper outputting, Turn the knob switch, adjust the value.

Tap the ‘star/stop’ switch once again, the device will output the paper.

## CONTINUOUS MODE “A025”

A025 means to set the length 25CM and the minimum is 25CM.

Tap the star/stop' switch once to automatically output 25CM continuously.

The default paper quantity is unlimited.

Tap the 'star/stop' switch once again to stop paper outputting.

Modify the length operation: After stopping the paper outputting, Turn the knob switch, adjust the value.

Quantity setting: After stopping, click the knob once, the interface becomes 'C000' , turn the knob to change the value, there is no operation for 3 seconds, and return to the the interface of 'A025'.(The default is 'C000' , which means run continuously;for other values, the equipment will automatically stop after the equipment runs the values for the number of times)

Tap the 'star/stop' switch once again, the device will output the paper.


## PEDAL MODE “P---”

Press and hold pedal --- output the paper continuously.

Release the pedal --- cut the paper automatically.

## THE MACHINE HEAD CAN BE ROTATED DOWNWARD BY 45°, 4 GEARS

Pull the knob outwards and adjust the angle of the nose.

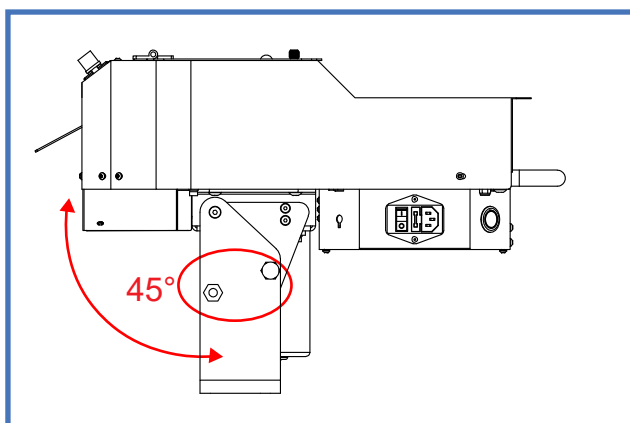


## MAINTENANCE

### PAPER JAM PHENOMENON

When paper jam occurs, the equipment will stop automatically. If it is still running, cut off the power supply and restart it.

Observe the stop position of the cutter from the paper outlet. If it is not in the reset state (reset state: the rubber wheel can be seen from the paper outlet and the cutter stays on the right side), click (short press) the retract button to make The knife returns to the reset state.

The back knife button,only used when paper is jammed.

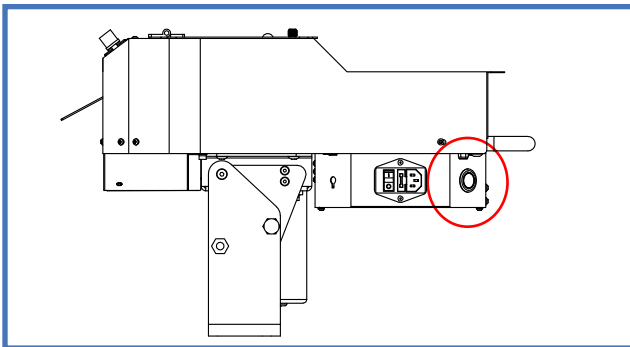

Cut off the power and clean the paper remaining inside. If the paper can't be cleaned from the paper outlet, open the flip cover to clean.

Loosen 2 screws and flip up the cover.

